



Fraserway RV

Your Vehicle to Adventure™

RV Type:

A-Class Luxury



Instruction Manual

ENGLISH



CANADIAN TRAFFIC RULES AND ROAD SIGNS.....	2
TRAFFIC RULES	2
ROAD SIGNS	4
CABIN.....	5
IGNITION SWITCH.....	5
BATTERY BOOST SWITCH	5
AUTOMATIC TRANSMISSION.....	5
TOW/HAUL	5
CRUISE CONTROL	6
PARKING BRAKE (EMERGENCY BRAKE/HAND BRAKE)	6
HEATED SIDE MIRRORS	6
ELECTRONIC LEVELING SYSTEM	6
RADIO/BACK UP AND MIRROR CAMERA.....	8
AUTOMATIC STEP.....	8
VEHICLE CARE AND MAINTENANCE.....	8
GASOLINE	8
ENGINE OIL.....	8
TIRES.....	9
VEHICLE SPECIFICATIONS	10
EXTERNAL VIEW	11
AWNING	11
ELECTRICAL SYSTEM	12
BATTERY SWITCH POSITION	12
LIGHTS	12
GENERATOR	14
PROPANE TANK	16
WATER SYSTEM.....	17
TOILET	19
WASTEWATER	19
HEATING/AIR CONDITIONING	20
DINETTE TABLE/BED COMBINATION.....	21
BUNK BED.....	21
COOKING AREA	21
MICROWAVE	22
FRIDGE.....	25
SLIDE-OUT	27
SAFETY EQUIPMENT	29
SMOKE DETECTOR/CARBON MONOXIDE ALARM	29
FIRE EXTINGUISHER.....	29
PROPANE DETECTOR/ALARM.....	29
RETURNING THE VEHICLE.....	30

CANADIAN TRAFFIC RULES AND ROAD SIGNS

TRAFFIC RULES

ALCOHOL AND DRUGS

Permitted blood alcohol levels are mandated by the provinces and territories. Please do not drive under the influence of alcohol and/or drugs!

TRAFFIC LIGHTS



Traffic lights are generally across the intersection. Left turn arrows indicate that you can safely turn left while the oncoming traffic is still stopped at a red light.

After you have come to a complete stop and made sure the intersection is clear of all vehicles, cyclists and pedestrians, you may turn right despite a red light in the U.S. and Canada except for the island of Montreal in Québec. Exceptions are often limited to certain times and clearly posted as below.



Example on the left: Turning right is prohibited on red.

Example on the right: Turning right is prohibited from Monday to Friday, 7AM - 9AM and 4PM - 6PM (no matter whether there are traffic lights or not).



SEAT BELT

Canadian and U.S. laws require driver and all passengers to be seated with the seat belt fastened when the vehicle is in motion.

SPEED LIMITS

The Speed limit in most urban areas is 50 km/h, and on highways either 80 or 100 km/h, unless otherwise posted.

PEDESTRIANS

Canadian drivers are usually very polite and considerate. Pedestrians have the right of way.

DRIVER'S LICENSES

We require your national license for RV rentals. Foreign licenses are generally accepted in Canada. However, we recommend carrying an international driver's license in addition, unless your original license is issued in English or French.

GPS SYSTEMS AND HEIGHT RESTRICTIONS

Your RV's external dimensions and gross vehicle weight (GVW) are shown on a windshield sticker and in your manual. GPS systems do not provide any information on height restrictions on your planned route. Always check restriction signs for tunnels, overpasses, gas stations, roof constructions, ferries, etc.! Drive-thrus at fast food outlets or entry ways to hotels/motels are generally too low for RV's!

As a general rule: the minimum clearance must be 3.70 m or 12 ft. for all of our vehicles.

HOV LANE (HIGH OCCUPANCY VEHICLE LANE)

HOV lanes are for vehicles with two or more people inside. These lanes may only be used by vehicles that carry the required minimum number of people. The HOV lane symbol is a diamond, which is indicated on many HOV signs and above all, on HOV lanes. Example of signs:



Left: HOV lane for buses and vehicles with at least 3 people starts here.

Right: From 5AM to 11PM, this lane is an HOV lane for buses and vehicles with at least 3 people only. During the time from 11PM to 5AM, this lane may also be used by vehicles with fewer people.



<p>Our RV's allowed on HOV lanes:</p> <ul style="list-style-type: none"> • Van Conversion • Truck Camper • C-Small 	<p>Our RV's NOT allowed on HOV lanes:</p> <ul style="list-style-type: none"> • Adventurer 4, Overlander • C-Medium, C-Large, C-XLarge • A-Class
--	---

PARKING

Regulations vary from province to province. As a general rule, parking is only permitted in driving direction; generally, parking is not permitted within 6 meters either side of

- Pedestrian crossings
- Curves or corners
- Entrance/Exit of hotels, theatres, public meeting places, schools, fire departments, playgrounds
- Stop signs
- Fire hydrants
- Traffic control signals

CAUTION:	A yellow curb side generally marks a no-parking zone. If your vehicle uses more payable parking spots, you have to pay for the number of spots used!
-----------------	--

EMERGENCY VEHICLES

If a police car, fire truck or ambulance with flashing lights and/or sirens is approach (from front or back), pull over to the right and wait until the vehicle(s) has passed.

If you are stopped by a police car, pull over to the right, remain seated, open the window and wait for the officer to approach. Keep your hands visible on the steering wheel and follow the orders of the officer.

STOP SIGNS



You must always come to a complete stop. The driver who got to a 4-way stop first, will drive off first. When two cars arrive at the same time, yield to the car on your right-hand side. The same rule applies if traffic lights are not working. Canadians are usually disciplined and courteous. Only one car at a time can cross the intersection.

TOLL BRIDGES

If you are aware that you have crossed a toll bridge on your journey, please inform us upon your RV return to avoid additional administrative charges. Fraserway RV will be billed directly by the company responsible for collecting the toll fee.



Some crossing will require direct payment on the spot. Please use the truck lane to avoid any height restriction issues.

ACCIDENTS

Most accidents happen while parking the RV. Such damage can be easily avoided if a passenger gets out of the vehicle to help the driver manoeuvring by giving directions.

Never settle or admit any wrong doing at the accident scene! If needed call the Police. If possible make notes, take pictures and exchange information with the other party.

Always call our OnRoad-Service and fill in the accident report, which you will find in the "Emergency" section of the instruction manual. The police will not attend to minor accidents without personal injury.

SCHOOL BUSES



Canadian school buses are yellow. They signal to stop all traffic (no passing!) using flashing red lights and/or a swing-out stop sign. It is against the law to pass a stopped school bus. All traffic must come to a halt to ensure children can get on and off the bus safely. Once the signals have been turned off and/or the stop sign has been pulled, the traffic move again in both directions. failure to obey This traffic rule is a serious offence.

Only if the road is separated by a median, can the oncoming traffic slowly proceed without stopping.

 
ROAD SIGNS



One way street



Pedestrians are not allowed to cross the street here.



Crossing the road is only permitted at crosswalks.



Do not enter.



Vehicles parked in this zone without a permit will be towed.



Road is closed. arrow points in the direction of the detour.



From this point, do not change lanes until further notice.



Authorized vehicles only (buses, emergency vehicles, etc.).



No parking on either side of the sign. If the arrow points in one direction only, do not park on the side it points to.



No stopping on either side of the sign.



This road or lane is for bicycle use only.



This road or lane is for buses only.



Private property. No parking.



Turn headlights on and remove sunglasses (common at tunnel entrances).



 
No parking from 8:30AM to 5:30PM. In the remaining time, parking is allowed.



No parking except on Sundays and on holidays.



No parking. Loading zone.



Parking on both sides of sign daily 8:30AM - 5:30PM for 2 hours. Canada does not use parking disks.



Drivers travelling in opposite directions share the centre lane for left turns.



On multi-lane highways: Sign in combination with exit signs means that a lane ends and becomes the exit lane.



Control signal: Placed over lanes to indicate which ones are open for driving.

Here:

RED = do not drive in Right lane.



YELLOW: Move into one with a green arrow. If flashin yellow over all lanes: Slow down and proceed with caution.




Green arrow: Drive in this lane.

CABIN

All vehicles are equipped with an automatic transmission, power steering and power brakes. The engine is a 7.3 litres V8 with 350 horsepower.

IGNITION SWITCH

The ignition switch has 5 different key positions:

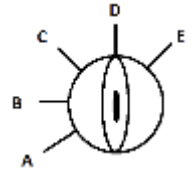

POSITION A (ACCESSORY) allows you to use the vehicle's electrical system (radio etc.) without the engine running or the ignition being turned on.

POSITION B (LOCK) turns off the engine and locks the steering wheel in place. The key can only be removed in this position.

POSITION C (OFF) turns off the engine and the entire electrical system without locking the steering wheel.

POSITION D (ON): All circuits are active and the warning lights on the dash are on. This is the driving position

POSITION E (START) starts the engine.

BATTERY BOOST SWITCH



The Battery Boost switch allow you to jump-start the vehicle should your engine battery be empty. The Battery Boost switch is located to the left of the steering wheel (see picture). Should the engine not start, press the Battery Boost switch while turning the ignition key, and do not release the switch until the engine starts.

AUTOMATIC TRANSMISSION

The gear stick is to the right of the steering wheel. To change gears, Pull the lever towards you, and then move it up or down into the desired position. Keep your right foot firmly on the brake pedal to shift from P (park) to R (reverse) or D (drive). The gears are as follows:

P	PARK	to start or turn off the engine. <u>The key can only be pulled in this position.</u>
R	REVERSE	to drive backwards. The rear view camera is activated automatically.
N	NEUTRAL	position has to be used for towing only!
D	DRIVE	for all normal driving situations with the best fuel economy.
M	MANUAL	is the option to choose the gears manually. We <u>DO NOT</u> recommend to use this option!
2	2nd gear	to be used to start-up on slippery roads.
1	1st gear	allows maximum engine braking and upshifts by moving gearshift. Does not downshift into 1 st gear at high speeds!

CAUTION:	We strongly recommend to use D for normal driving only! 1 st or 2 nd gear should be only used in case of getting stuck.
-----------------	---

TOW/HAUL



The Tow/Haul function optimizes the shifting performance and reduces the potential for transmission overheating or failure due to excessive shifting when driving in mountainous areas. This provides extra power when going uphill and braking assistance from the engine when going downhill to reduce the risk of overheating the vehicle's brakes. Select this function by pressing the button at the end of the shift lever.

CRUISE CONTROL

The vehicle is equipped with cruise control. It will only engage at a speed of minimum 50 km/h. Don't use the cruise control in mountainous terrain. The increased shifting will lead to increased fuel consumption and could result in transmission damage.



PROGRAMMING

1. Turn cruise control on using the **ON** button.
2. Accelerate with **SET +** until you reached the desired speed. Release the button and speed currently reached will be maintained. As well you can speed up using the foot pedal. As soon as the desired speed is reached briefly press the **SET +** button.
3. You can reduce the speed by pressing **SET -**.
4. If you have to brake and then wish to resume the previous speed, press **RES**, and the vehicle automatically accelerates until it reaches that speed.
5. Press **CANCEL** to pause the cruise control.
6. Press **OFF** button to turn off the cruise control.

PARKING BRAKE (EMERGENCY BRAKE/HAND BRAKE)

You can set the parking brake, which is at the bottom left in the foot area, by pushing the pedal ① down with your foot. To release the parking brake, pull the release lever, which is located above the pedal ②.



Parking brake release lever (pull to release) ①

Parking brake foot pedal ②

HEATED SIDE MIRRORS



Your motorhome is equipped with rear-view mirrors. The switch to turn on the mirror heater ① is to the left of the driver's seat beside the mirror control ②. Leave the switch in the Off position unless you need to defrost the mirrors. Leaving the switch in the ON position will eventually drain your engine battery, as the heater will stay on even after the engine is shut off.

ELECTRONIC LEVELING SYSTEM

We recommend to use the electronic leveling system because of the size and weight of the slide-out. If the RV is not parked in a completely level position, this might cause issues when extending or retracting the slide-out. Please follow the steps outlined below carefully.

CAUTION:	<p>The system is <u>NOT</u> suitable for adjusting an inclined position of the motorhome. The tires should be carrying the weight of the motorhome at all times and never lose contact to the ground. The extendable leveling jacks are not designed to carry the weight of the motorhome. Their only purpose is to absorb slight movements within the motorhome.</p> <p>The renter of the vehicle is liable for any damages resulting from improper use of the leveling system. We assume no responsibility for any expenses and/or time loss due to improper handling.</p>
-----------------	--

The following must be ensured for the LCI Electronic Leveling System to work:

1. the engine of the motorhome must be running,
2. the parking brake must be engaged,
3. the slide-out must be retracted,
4. the RV must NOT be hooked up to external 110V power,
5. the generator must NOT be running.

If all this is ensured, please follow these steps:

6. Press the ON/OFF button ① on the control panel. The system is now operational, and the buttons are illuminated.
7. Make sure that the LED next to ENGAGE PARK BRAKE is not flashing. If it is flashing, please set the parking brake. The electronic leveling system is only operational if the parking brake is set.
8. Press AUTO (automatic) button ② to activate the automatic leveling function.
9. Press the ON/OFF ① button to turn off the system.

PLEASE DO NOT USE THE MANUAL OPTION ③ TO LEVEL THE RV BY USING THE SINGLE JACK BUTTONS ④! IF THE AUTOMATIC LEVELING DOESN'T WORK, PLEASE CALL OUR ONROAD SERVICE AT 1-866-535-6601!



To retract the jacks please

1. Start the engine
2. Make sure that the parking brake is engaged
3. Press the ON/OFF button ① on the control panel.
4. Press the RETRACT ALL JACKS button ⑤.
5. Press the ON/OFF ① button when all jacks are retracted.

CAUTION:	After you have started automatic leveling, it is very important that you no longer move around in the motorhome until it is level and the green LCI logo in the centre of the control panel illuminates. The leveling results may be affected if you move around in the motorhome while leveling is in process.
-----------------	---

Troubleshooting: Leveling Jacks

Problem	Cause/Solution	
Leveling jacks cannot be extended/retracted.	The breaker ② right at the motor has been tripped due to power overload. Check the leveling system's motor in the front left area under the hood ①. The small yellow switch is the breaker of the motor. This breaker should be in a parallel position to the motor. When the breaker is tripped, it is in a 45-degree angle to the motor. If that is the case, press it back flat against the motor, and check if the leveling jacks/automatic step/rear view camera are/is now working.	

RADIO/BACK UP AND MIRROR CAMERA



Your RV is equipped with a Radio/Camera combination. The screen turns on automatically when you change into reverse gear (or operate the direction indicators). Momentarily press ① to turn the radio on or off, otherwise the batteries may be drained. The radio does not turn off automatically when the ignition key is removed!

AUTOMATIC STEP



Your RV is equipped with an automatic electric step ①. Usually the step will come out when you open the coach door and go back in when closing the door. Sometimes it is comfortable to keep the step out all the time, as an example on a campground. You can keep the step in the OUT position by turning of the automatic on the corresponding switch ② near the entrance door inside the RV.

Troubleshooting: Automatic Step

Problem	Cause/Solution
The automatic step is not working.	<ol style="list-style-type: none"> 1. The coach battery (Main power switch) is not turned on. 2. The automatic step is not turned on. The corresponding switch is located next to the coach battery switch. 3. One of the two magnets, which are located near the lower hinge in the door frame (red markings in the picture) and trigger the automatic step function, is no longer in its correct position or has fallen off. Please check and reattach if required.



VEHICLE CARE AND MAINTENANCE

GASOLINE



This vehicle is powered by a gasoline (gas) engine, requiring **regular unleaded gas (Octane 87)**. Please fill up at “larger brand” gas stations. Lower quality gasoline, supplied by independently owned gas stations can lead to engine problems.

ENGINE OIL

Please check the engine oil level and all other fluids regularly (approximately every 1,500 km when the engine is cold). If needed use 5W30 oil. Please keep all receipts for potential refunds.

CAUTION:	The renter is liable for ANY damage resulting from miss-fuelling or using incorrect engine oil. If you have any questions, please call our OnRoad-Service.
-----------------	--

OIL CHANGE INDICATOR LIGHT ILLUMINATES

We change the engine oil every 12,000 km. There is a possibility that the oil change light in the dash will illuminate. An oil change might not be needed. The last oil change is recorded on a sticker on the windshield. Should an oil change be necessary, please call our On Road-Service to obtain information on authorized shops. Please keep all receipts for potential refunds.

TIRES

TIRE PRESSURE - TIRE CHECK

Please check the tire pressure regularly when the tires are cold!

Tire pressure (cold): 82 PSI (front) – 82 PSI (rear)*

*The recommended tire pressure is indicated on a sticker near the driver's seat. Wheel nuts should be checked every time you leave a campground.

CHANGING THE TIRES

Tires should preferably be changed by authorized personnel only. In the event of a required tire change, please contact our On Road-Service at 1-866-535-6601. If professional help cannot be obtained, you have permission to change your tire(s), however, at your own risk.

After a tire change, the wheel nuts of the changed tire(s) must be checked after 100 kms or sooner and retightened if necessary! Failing to do so, may cause tire damage and can result in serious accidents.

CAUTION:	We assume no responsibility for damages resulting from improper tire change or non-preformed checks.
-----------------	--

STORAGE LOCATION FOR TIRE CHANGE TOOLS

The jack and tools needed for the tire change can be found in the rear outside compartments of the motorhome.

VEHICLE SPECIFICATIONS

Motorhome class	Class A
Chassis	Ford F53
Engine	Eight-cylinder (V8)
Roof air conditioner	Yes
Microwave	Yes
Convection oven	No
Oven	Yes
3-point-seat belts at dinette	No
Bathroom vent	Yes
TV	No
DVD player	No
Rear dual tires	Yes
Fuel-driven generator (gasoline)	Yes
Side slide-out	Yes
Rear slide out	No
Beds	7
Seat belts	7
Fuel type	Gasoline
Engine oil type	5W30 oil
Bumpers	Steel
Locking lug nuts	Not available
Number of axles	2
Spare tire	This vehicle does not have a spare tire.
Tire size	The tire size is indicated on the tires and on the sticker near the driver's seat. (Front and rear tires: 245/70R19.5G)
Tire pressure	The tire pressure is indicated on tires and on a sticker near the driver's seat. Front tires: 565 kPa/82 psi - Rear tires: 565 kPa/82 psi
Fire extinguisher	The fire extinguisher is located next to the entrance door.
Sewer hose	The sewer hose is located in the sewer compartment on the driver's side.


Dimensions & weight	Metric system	Imperial system
Height (incl. all superstructures)	370 cm	12'2"
Width	250 cm	8'2"
Width with slide-out extended	298 cm	9'3"
Length	970 cm	31'10"
Gross vehicle weight (GVW - i.e. weight incl. full fuel, propane, wastewater and water tanks, maximum number of persons allowed, and luggage)	8,164 kg	18,000 lbs

Fill capacity	Metric system	Imperial system
Freshwater tank	189 litres	50 gallons
Grey water tank	151 litres	40 gallons
Black water tank	151 litres	40 gallons
Fuel tank (gasoline)	302 litres	80 gallons
Propane Tank	79 litres	21 gallons
Total weight of all tanks when full	872 litres	231 gallons



Interior specifications

	Included	Metric system	Imperial system
Beds			
Overcab bed	Yes	137 cm x 188 cm	54" x 74"
Rear queen bed	Yes	183 cm x 193 cm	72" x 76"
Dinette bed	Yes	101 cm x 178 cm	40" x 70"
Pull-out sofa bed	Yes	101 cm x 173 cm	40" x 68"
Interior Room Height		213 cm	84"

EXTERNAL VIEW

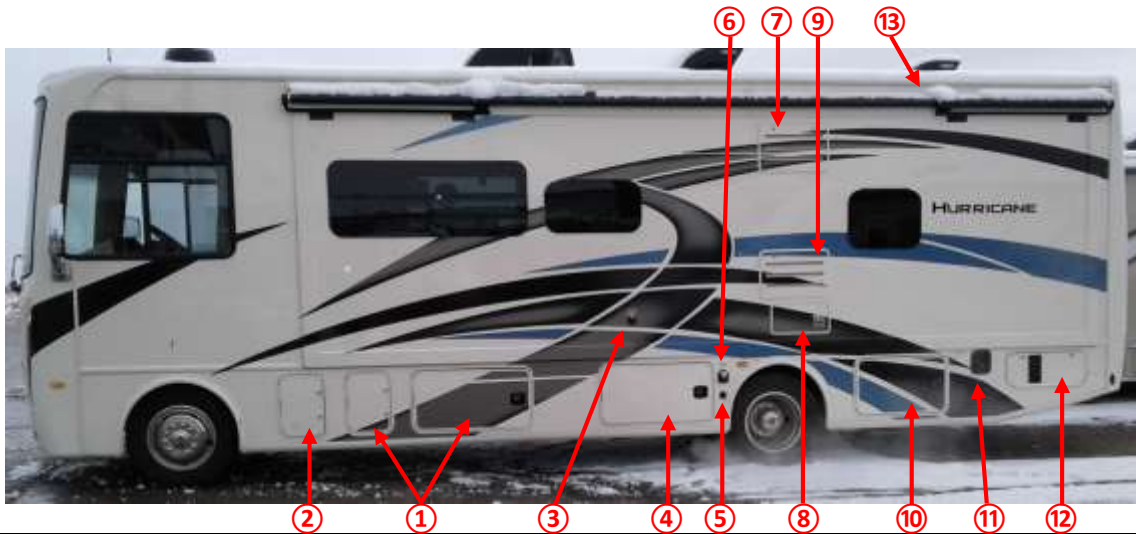

1. Storage compartments	10. Slide-out module & storage compartment	19. Exterior TV
2. Motor for stabilizers	11. Fuel tank (regular unleaded gas, Octane 87)	20. Coach battery compartment
3. City water connection	12. Generator	21. Freshwater tank/potable water
4. Sewer system (connection, valves, hose)	13. Slide-out with slide-out topper	22. Electric step
5. Cable TV connection	14. Outdoor kitchen	23. Awning
6. 110V power connection	15. External propane connection	24. Back up camera
7. Fridge vent cover	16. Water heater cover – caution: HOT!	25. Service ladder – please do not use!
8. Furnace fan – caution: HOT!	17. Propane tank	
9. Freezer vent cover	18. Power outlet	

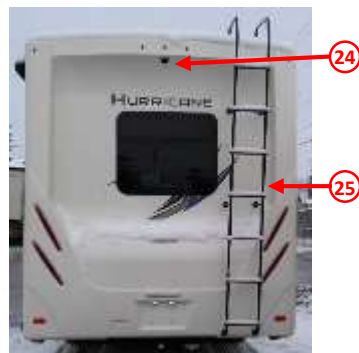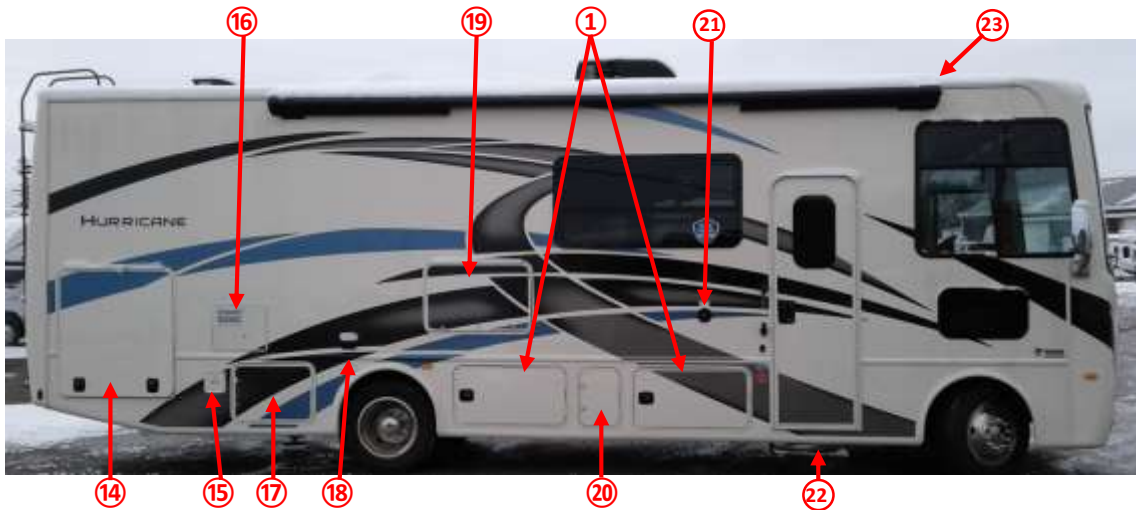


AWNING

Your vehicle is equipped with an awning ①, which, like the corresponding light ②, is controlled via the integrated touch pad. The touch pad is located on the wall left of the bathroom door.

IMPORTANT:

- Never use the awning in bad weather or in strong winds!
- The awning must be retracted if you leave the RV unattended for an extended period of time.
- Before extending the awning make sure that sufficient space is available.
- Do not manoeuvre your vehicle with the awning extended, and always be sure the awning is retracted when leaving the campground!
- If the awning will not extend or retract simply turn off the main power switch of the house batteries, wait 10 seconds and turn it back on again. This will reset the electric system and the awning may operate again.

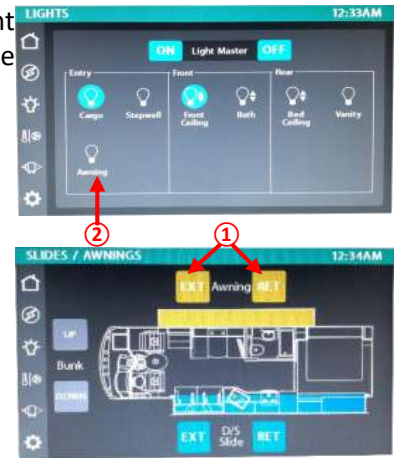

CAUTION: Any damage resulting from improper operation of the awning is the renter's sole responsibility.

ELECTRICAL SYSTEM

12V DUAL BATTERY SYSTEM

The living area of your RV is equipped with a 12V dual battery system, the so-called coach battery. The vehicle battery (provides power to the engine and driver's cabin) and coach batteries (providing power to the living area of the motorhome) are both charged by the alternator while you are driving but discharge independently from each other. The coach batteries of your motorhome are located under one of the entrance door steps.

CAUTION: Please do not overload the coach batteries because they cannot sufficiently recharge if they lose too much voltage. Once the charge state of the coach batteries has reached a very low level, the alternator can no longer recharge them simply by driving. In that case, the coach batteries must be recharged using the exterior power cable (110V) on the campground for at least 8 hours. We are not responsible for any cost or lost time due to overloaded coach batteries.

BATTERY SWITCH POSITION




The main switch ①, ② or ③ for turning the coach battery on and off is located next to the side entrance door at floor level. This switch allows you to turn the 12V battery, providing power to the motorhome's living area, on and off. If none of the 12V appliances in the motorhome is receiving power, it is possible that this switch was accidentally turned off. Please check if this is the case, and turn it back on if required (ON position).



12V appliances: Inside and outside lighting, water heater, water pump, fan heater, awning, bathroom vent, fridge and slide-out.

LIGHTS

The lights in your RV are controlled via the integrated touch pad. This touch pad is located on the wall left of the bathroom door.

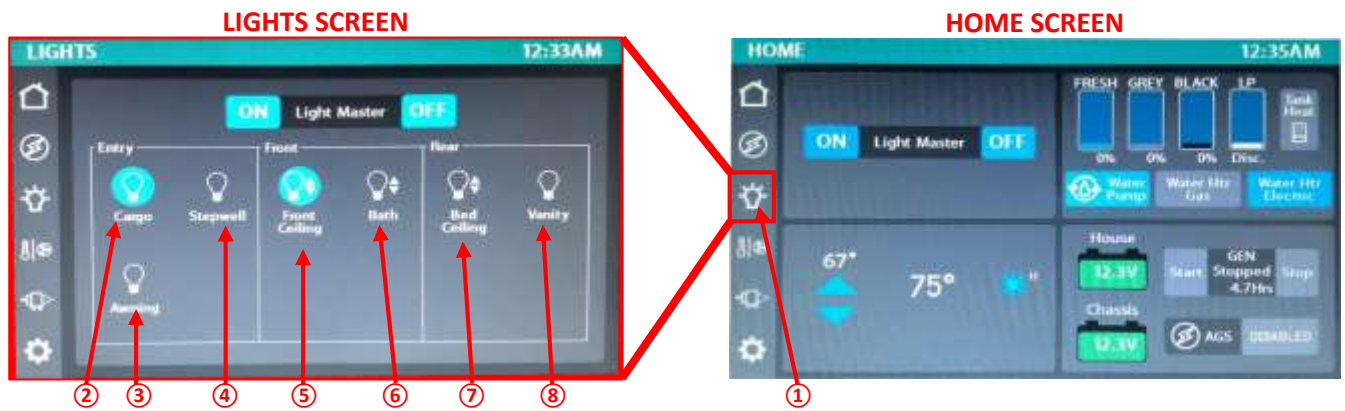

Tap the LIGHTS button ① on the HOME SCREEN button to reach the menu for the LIGHTS. Now you can control the lights:

- ② CARGO (Lights in storage compartments)
- ③ AWNING (Awning light)
- ④ STEPWELL (Step light)
- ⑤ FRONT CEILING (Coach front part lights)
- ⑥ BATH (Bathroom light)
- ⑦ BED CEILING (Bedroom lights)
- ⑧ VANITY (Light above bathroom mirror)

HOOK-UP TO THE POWER GRID (110V)



Your RV is equipped with a power cable. It is needed to hook up the vehicle to the 110V power grid of the campground. The plug is a 30 AMP plug. If your campsite only provides 15 AMP, use the provided adapter. All electrical appliances of the motorhome (and the hook up at the campsite) should be turned off before you connect your RV. We recommend using the 110V hook-up whenever possible in order to preserve and recharge your coach batteries. After connecting the power cable ①, tighten the black ring ② to prevent accidental unplugging.




The coach batteries will recharge while the vehicle is connected to the electrical hook-up. If the fridge is set to Automatic, it automatically adjusts to the 110V power supply when you connect the vehicle to the campground's power.

CONVERTER

A (power) converter, also referred to as voltage transformer or power transformer, automatically converts 110V power to 12V power for use for 12V appliances. Since the converter, which is located in the fuse box, is fully automatic, no manual operation is required.

FUSES & FUSEBOX

The fuses for the internal 12V or 110V power circuit are located in the fuse box. You will find it in the master bed frame near the floor.

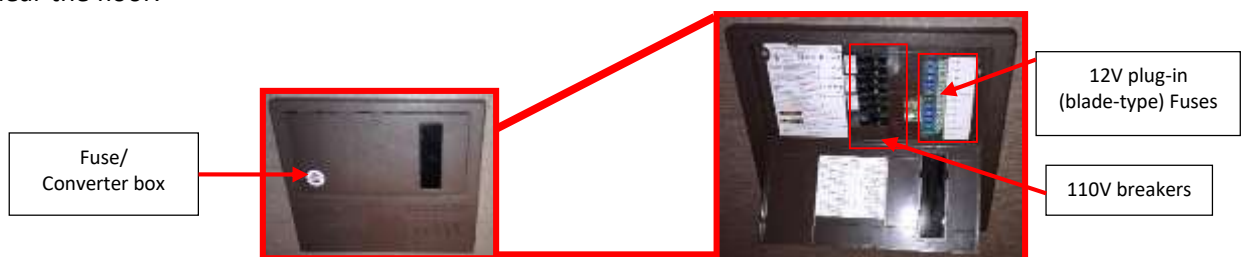

12V PLUG-IN (BLADE-TYPE) FUSES

Those fuses protect inside and outside lighting, water heater, water pump, heater fan, fans, bathroom vent, fridge and awning. If an appliance doesn't work, a fuse might be blown. When the wire in the middle of the fuse is broken (see picture) you will need change the fuse. For your convenience, we provide spare fuses. You can find them in one of the kitchen drawers.



110V BREAKERS

The 110V fuses protect the power flow to the microwave and the roof air conditioner. Check the breaker if one of these appliances stopped working. If so, move the breaker all the way into the OFF position and then turn it back on.



POWER OUTLETS & RESET BUTTON



Only when connected to shore power, will the integrated power outlets work. They will not work while you are travelling and the only power source available is the coach battery. If the power outlets are not working despite being connected to shore power, check if the reset switch (see picture) has been tripped. To do this, press the reset button and check whether your power outlets are supplied with power again. The reset button is located at the bathroom power outlet.

MICROWAVE

A minimum of 110V/15AMP hook-up is needed to run the microwave. With a 15AMP connection you can easily overload the circuit by running additional appliances, which might cause the main fuse (110V breaker) to trip. If you use multiple 110V appliances, we recommend using a 30AMP connection.

ROOF AIR CONDITIONER

A 110V/30AMP hook-up is required to run the roof air conditioner,


Troubleshooting: Power Supply

Problem	Cause/Solution
No power in the power outlets	<ul style="list-style-type: none"> - Unit is not connected to 110V - 110V power source at campground is not working - Broken power cord - Tripped breaker - Reset button tripped
No power at all in the living area or only when the engine is running	<ul style="list-style-type: none"> - Main power switch is OFF - Coach battery level is too low and the batteries need to be charged by driving or connection to 110V

Problem	Cause/Solution
Smell of rotten eggs	Please open all windows and doors, turn off the propane, and check if there is a leak in the propane system. If this is not the case, your coach batteries may have been overloaded. A propane leak must be repaired in a repair shop, and an overheated battery must be replaced. Please contact our OnRoad-Service, and we will make an appointment for you.

GENERATOR

Your motorhome is equipped with an integrated generator providing your vehicle with 110V power (AC) even when it is not connected to the power grid on the campground. The generator will also charge the coach batteries. Powered by gasoline from the RV's gas tank, the generator consumes approximately 3.5 litres per operating hour. The fuel tank must be more than ¼ full for the generator to start and work. It will turn off automatically when the fuel level falls below ¼.

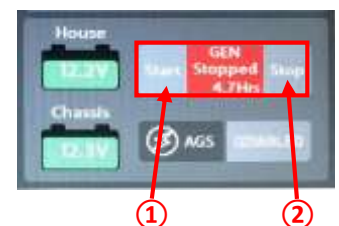

PLEASE DON'T USE THE GENERATOR WHILE THE RV IS IN MOTION!

The generator is controlled via the integrated touch pad which is located on the wall left of the bathroom door.

Turning the Generator ON


1. Turn off all electrical devices
2. Press and hold ① to start the generator. Please note that the generator requires a press and hold because it operates on a one-second delay as a safety feature to help prevent accidental generator starts.
3. When the microwave beeps (30 – 40 seconds) the power circuit is closed and you can use the electrical devices.

Turning the Generator OFF

1. Turn off all electronic devices.
2. Press and hold ② to stop the generator.

Troubleshooting: Generator

Problem	Cause/Solution
Generator does not start	<ul style="list-style-type: none">- The fuel tank level is below ¼.- Start button pressed too short. It needs to be pressed for approx. 10 seconds (sometimes longer)- Weak coach battery. Start the engine and then the generator.- Blown or burnt fuse. Please check the fuses in the fuse box and on the generator, and replace plug-in fuses if required
Fuse is tripped	The circuit is overloaded. If too many appliances are used simultaneously, the fuse may be tripped while the generator is running. Please turn off the appliances, check the 110V breaker in the fuse box, and restart the generator. If all breakers in the fuse box are in the ON position, please check the breaker right on the generator (see below picture).

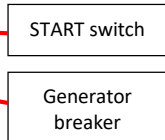

Please remove the green generator cover to check the breaker (small black lever) on the side of the generator. Apart from that, there is also a start switch above it directly on the generator.



SAFETY INSTRUCTIONS:

1. Keep the compartment clean and dry at all times, and do not use this as a compartment for storage.
2. Do not use the generator when the motorhome is parked in high grass or in scrubby terrain because the heat of the exhaust fumes may cause a fire in dry conditions.
3. Do not touch the generator while it is running or shortly after it has been turned off to avoid burns.

SOLAR SYSTEM


Your RV is equipped with a solar system on the roof, which recharges the coach battery when exposed to sunlight. The solar system is automated and does not require manual operation. Please do not make any changes to the default settings on the control panel.




INTERIOR CONTROL PANEL

Most of the electric functions in this RV are controlled via the integrated touch pad which is located on the wall left of the bathroom door. The HOME screen offers the following functions:

1. Go to HOME screen	9. Tank Heaters (for winter camping only!)
2. Go to Automatic Generator Settings	10. Water Pump
3. Go to LIGHTS screen	11. Water Heater (Recommendation: Use LP Gas heater!)
4. Go to CLIMATE CONTROL screen	12. Generator ON/OFF
5. Go to SLIDE-OUT/AWNING screen	13. AGS ON/OFF
6. Go to GENERAL SETTINGS screen	14. House (Coach) Battery level
7. Controls all LIGHTS at once	15. Chassis (Engine) Battery level
8. Level Check	
- FRESH = Freshwater Tank	
- GREY = Greywater Tank	
- BLACK = Blackwater (Sewer) Tank	
- LPG = Propane Tank	

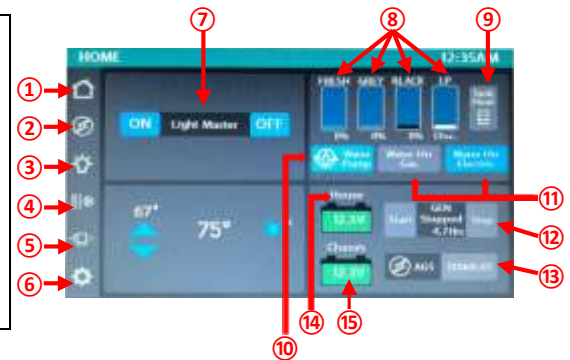

PROPANE TANK

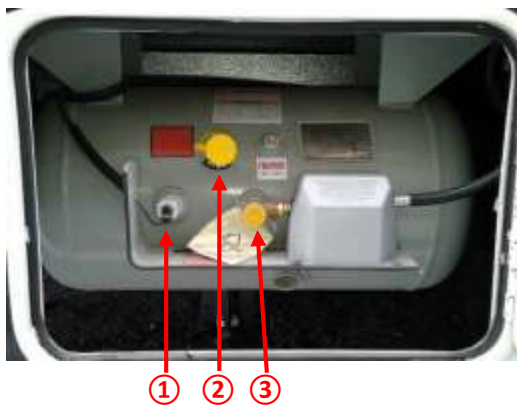

Stove top burners, oven, water heater, furnace and refrigerator are propane operated. Therefore, your motorhome is equipped with an integrated 79-litres/21-gallon propane tank, which is located underneath the vehicle. Fill level ①, tank inlet indicator ② and main valve ③ are directly on the tank.

The propane tank does not need to be full when you return the vehicle. However, if you run out of propane while you are travelling, please refill the tank at your own cost. Propane can be refilled at many gas stations and some private campgrounds. The service personnel will do the refilling for you. For safety reasons, self-service is prohibited for propane.

CAUTION:	If used properly, propane is very safe fuel. Nevertheless, all our vehicles are equipped with a propane detector, which triggers an alarm when an elevated concentration of propane is detected in the air. Propane is highly flammable and explosive. Therefore, please be sure to strictly follow the operating instructions for all propane-operated devices in the vehicle.
	If you notice a typical smell of sulfur or rotten eggs, or if the propane alarm sounds, extinguish all open flames immediately, do not operate any electrical switches, and please close the main valve of the propane tank. Then immediately open all windows and doors. Once the alarm stops, make sure that all switches on the propane cooker are properly turned off, i.e. are in the OFF position. In such cases, avoid open fire under all circumstances!

Prior to any refuelling, propane refilling or ferry rides, the main valve of the propane tank MUST be closed. All propane-operated appliances, such as the fridge, stove and heater, must first be turned off.

Troubleshooting: Propane

Problem	Cause/Solution
Propane-operated appliances have no propane.	- The propane valve on the tank is closed. Please open the valve. - The propane tank is empty. Please refill.
No propane supply after the main valve has been turned open following refilling or a ferry passage.	Please open the valves very slowly because otherwise. The safety shut-off valve, may be triggered and prevents the propane from flowing to the end devices. Allow 1 to 2 minutes for the propane to reach the devices. If the shut-off valve has been triggered, please close the propane tank valve (turn lock). Then open the propane tank valve slowly.

Problem	Cause/Solution
Propane alarm is triggered or there is a smell of sulfur or rotten eggs inside the RV.	Immediately close the main valve on the propane tank. There may be a leak in the system. Open doors and windows so that any propane can escape to the outside. Avoid open fire under any circumstances until the smell has dissipated, and do not operate any electrical switches. The system must be inspected by a technician. If there is no problem with the propane system, the smell may indicate a coach battery overload or short circuit. If this is the case, you should be able to see a white powder (sulphuric acid) on or around the battery. Please do NOT touch it, because the acid is corrosive! Please call our OnRoad-Service so that we can arrange for an appointment with a technician.

WATER SYSTEM

FRESHWATER TANK (POTABLE WATER/TANK FILL)



Your motorhome is equipped with an integrated 189-litres/50-gallon fresh water tank. It is not automatically refilled by hooking up to the city water connection. It must be refilled separately through the Potable Water/Tank Fill inlet at the passenger side.


CAUTION:	Never empty the freshwater tank entirely because this may damage the water pump. You as the renter are liable for such damages. We take no responsibility for any expenses and/or time loss due to damages resulting from an insufficient amount of water in the water tank.
-----------------	--

Troubleshooting: Freshwater Tank

Problem	Cause/Solution
Freshwater tank remains empty despite refilling.	Be sure not to confuse the freshwater tank inlet (passenger side) with the city water connection or the sewer flush/sani flush (both at the driver side). The freshwater tank does not automatically refill through the city water connection but must be refilled separately.

WATER PUMP

If you use the integrated water tank for freshwater supply, you need to turn on the water pump. The water pump is controlled via the integrated touch pad which is located on the wall left of the bathroom door.

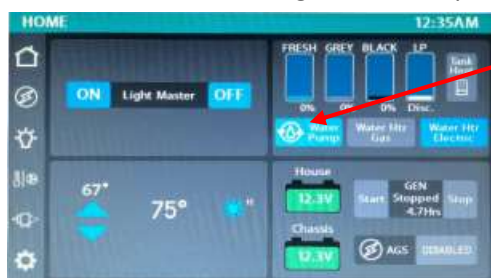

Please turn off the pump

- while you are driving,
- if you do not use it for an extended time,
- when you are using the city water connection

because it may overheat and you as the renter are liable for any resulting damages.

Troubleshooting: Water Pump


Problem	Cause/Solution
Water pump does not start.	<ol style="list-style-type: none"> 1.The 12 Volt plug-in fuse has burnt. Please check the 12V plug-in fuses and replace where necessary. 2.The battery voltage is too low. Please check the coach battery level on the battery and tank indicator panel, and if necessary, recharge the battery. 3.The pump is faulty. Please call our OnRoad-Service.

Problem	Cause/Solution
Constant “snoring” sound from the pump.	1. Water tank is empty. Please fill it. 2. Lose connection in the water system. Please call our OnRoad-Service.

CITY WATER CONNECTION

You can connect your RV directly to the fresh water system of the campground using the provided water hose. Please note the following steps:


1. Please ask the campground staff for the available water pressure. If the pressure is 40 PSI or higher you have to use the provided water pressure regulator!
2. Connect one end of the water hose to your city water connection at the driver side of the RV.

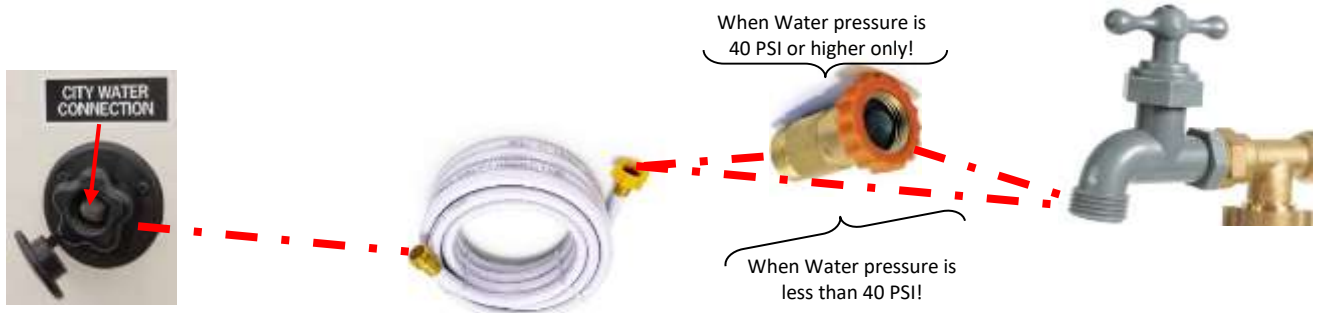

3. Connect the other end of your water hose to the water pressure regulator and the regulator to the water tap of the camp site when the water pressure is 40 PSI or higher. If the pressure is lower than 40 PSI, connect the other end of the hose directly to the tap.
4. Please open the water tap of the camp site half a turn only to avoid excess pressure on the water lines of the motorhome.
5. Open all water taps of your RV slowly to ventilate the pipes.

WATER HEATER

Your living area is equipped with a water heater, which supplies hot water to the water connections of the water basin, shower and sink. The water heater cannot be refilled manually but fills automatically using the cold water available in the internal freshwater tank or city water connection. Tap the water heater icon for propane ① or electric ②. The electric option is only available when the RV is hooked up to power at the campsite or with a running generator. We recommend to use the propane option! The water reaches a temperature of approx. 50 to 60 degrees Celsius (120 to 140 degrees Fahrenheit) and requires a heating time of approx. 20 to 30 minutes.

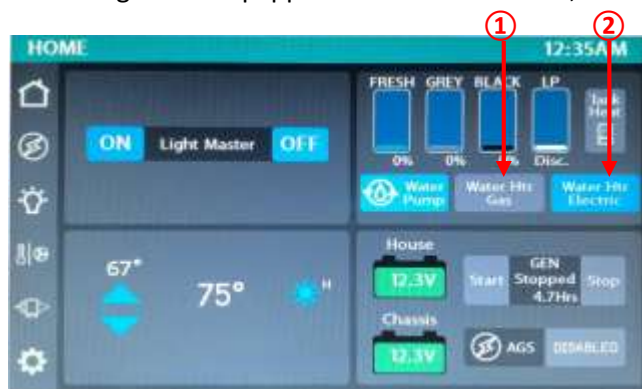

CAUTION:	It is important that the water heater is turned off while you are driving!
-----------------	--

Troubleshooting: Water Heater

Problem	Cause/Solution
The water heater does not work.	<ul style="list-style-type: none"> - Water is already hot. - 12V plug-in fuse for the water heater has blown. - Reset needed at the water heater itself - Not enough propane. - Not enough power because coach battery level is too low.

SHOWER

The shower has a slider on the shower head itself what can be pushed in both directions. It stops the water flow from the shower head and helps save water while having a shower.



Troubleshooting: Shower

Problem	Cause/Solution
The water in the shower does not run off.	<ul style="list-style-type: none"> - The grey water tank is full. Please empty it as soon as possible. - The shower drain is clogged up. Please remove any residue blocking the drain.

OUTSIDE SHOWER

Only biodegradable shower gels and shampoos are permitted for outside shower use. These products are available at outdoor and camping stores. Please consider the environment and follow these rules.

TOILET

CHEMICALS

To ensure that the toilet can be used without the risk of clogging, it is necessary to add special chemicals to the black water tank. These chemicals deodorize and decompose at the same time. They are available in liquid, powder and tablet form and should be added every time the black water tank has been. After you have added the chemicals to the black water tank pour two buckets of water into the toilet or flush at least four times to help the chemicals dissolve and work.

CAUTION:	Only use biodegradable or 1-layered toilet paper. Do NOT dispose of diapers, hygiene articles, Q-tips, etc. in the toilet UNDER ANY CIRCUMSTANCES! By avoiding this you help prevent clogging, repairs and time loss at your expense.
-----------------	---


Troubleshooting: Toilet


Problem	Cause/Solution
The toilet is clogged up.	<ul style="list-style-type: none"> - The black water tank might be full. Please empty it at the dump station of your campground or a Sani dump. - Pour some hot water into the toilet. It will flow to the wastewater tank and should help dissolve solid waste quickly. It only works if no objects are causing the problem.

WASTEWATER

Your RV is equipped with two separate wastewater tanks. The grey water tank collects the wastewater from the sinks and shower, the black water tank that from the toilet. Do not save water when flushing the toilet to prevent tank clogging.

EMPTYING THE WASTEWATER TANKS

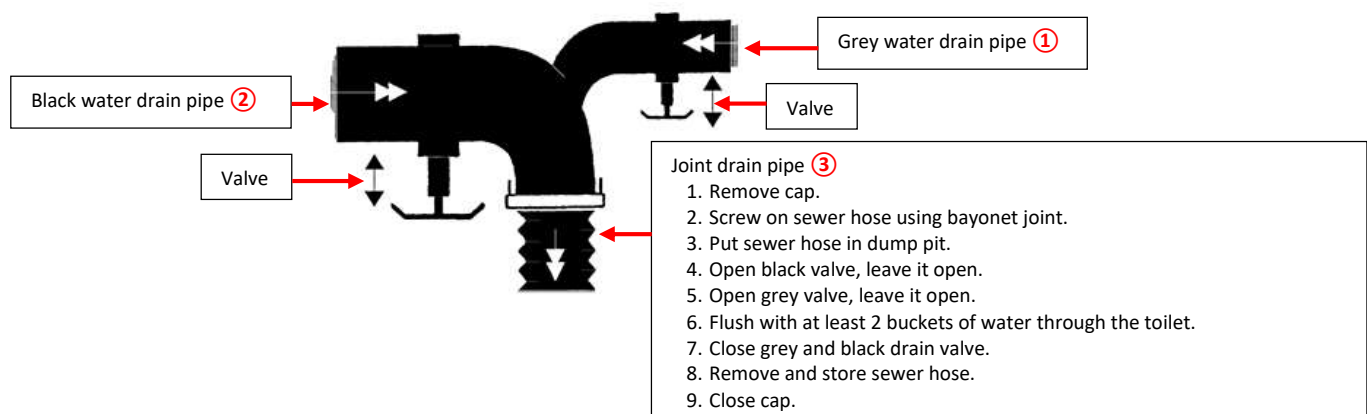

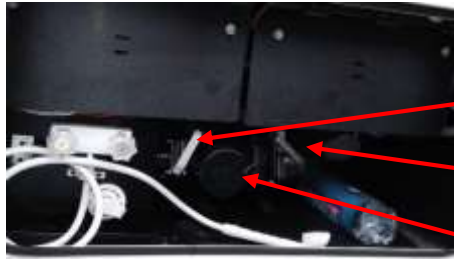

The sewer pipes of the

① GREY and

② BLACK WATER tank converge below the chassis and lead to a

③ JOINT DRAIN PIPE.

CAUTION:	<ul style="list-style-type: none"> - NEVER leave the vehicle unattended while draining the wastewater tank. - Do not leave the drain valves permanently open, even if you have a permanent sewer connection, because this may lead to crusting and clogging in the black water tank. The renter is liable for any damage resulting from such failure. - The wastewater tanks must be emptied at designated disposal stations only. These DUMPING, SANI or DISPOSAL stations can be found at many campgrounds and at some gas stations and rest stations along main roads and highways. The wastewater tanks should be emptied regularly, i.e. every two or three days.
-----------------	---

Troubleshooting: Wastewater Tanks

Problem	Cause/Solution
The RV is hooked up to the city water connection and water comes out of the toilet and/or the ventilation pipe on the roof.	You accidentally connected the water hose to the sewer flush. Turn off the water and connect the hose to the "City Water" hook-up.
The wastewater tanks are indicated to be full although they have just been emptied.	<ul style="list-style-type: none"> - Paper, grease or food gets stuck on the sensors inside the tank causing false indications. - There is no clog if you can hear the water run off through the sewer hose.

HEATING/AIR CONDITIONING

Heating and air conditioning is controlled via the integrated touch pad which is located on the wall left of the bathroom door. Tap the CLIMATE icon ① on the HOME screen and you will be moved to the CLIMATE CONTROL screen. Now you can choose AC ②, FURNACE ③ and different FAN ④ modes (high, low, auto).



The furnace in the RV runs on propane, however the fan that pushes warm or cold air through the ventilation system needs electrical power. The fan will operate on both 12V and 110V (shore power). Obviously, it is preferable to have a power hook-up in order to heat the RV.

CAUTION:	<ul style="list-style-type: none"> - NEVER let your heater run for an extended time WITHOUT a power connection. If your vehicle is not hooked up to a 110V power grid, the heater must not be overloaded. The fan consumes a lot of power and can quickly drain the coach batteries. You are liable for repairs due to battery overload! We are not liable for any resulting time loss. - To be able to operate the air conditioning, the RV must be hooked up to 110V/30AMP power.
-----------------	---

Troubleshooting: Heater

Problem	Cause/Solution
The heater blows only cold air.	<ul style="list-style-type: none"> - The set temperature has already been reached - Main valve of propane tank is closed - Propane tank is empty - Fan setting is on LOW or HIGH, please turn to AUTO! <p>If fridge and stove are working there is no problem with the propane supply!</p>
The heater fan does not start.	<ul style="list-style-type: none"> - Empty coach batteries. - Loose wire/contact in thermostat. Please call our OnRoad-Service.
Furnace fan comes on and shuts off after 20-30 seconds	Sail switch needs to be cleaned, please call our OnRoad-Service at 1-866-535-6601 for further instruction.

The air conditioning unit in the ceiling of the RV has no controls. The two white dials are simply to open or close the vents on either side of the unit. Turn dials (○) to open or close vents.



DINETTE TABLE/BED COMBINATION



Our motorhomes dinette area can be converted into a bed. Below the table top is a lever, which needs to be flipped from right to left. You can manually fold down the table by applying light pressure on the table top. The newly created surface is covered with the provided cushions to form a bed.



BUNK BED



There is an electrically operated over cab bunk bed above the driver's cabin. The switch for the bed is located in the wall right next to the bunk bed or in some units it will be operated by using the touch pad's SLIDES/AWNINGS screen. Please note that the bunk bed needs to be secured with two splints while driving. The splints need to be removed in order to lower the bunk bed. Before you lower the bed recline driver's and passenger's seat back. You will find the ladder under the bed in the master bed room.



Before you lower the bed recline driver's and passenger's seat back. You will find the ladder under the bed in the master bed room.


COOKING AREA

STOVE & OVEN

Stove and oven are propane-operated. The burners have no safety valves and the propane is flowing when an element is turned up but has not been lit. Please always make sure that the flames of the burners are not extinguished by a draft of air or the like and propane escapes unnoticed.

Features and control elements

- ① Glass cover
 - ② Ignition knob/Spark
 - ③ Oven door
 - ④ Top burner (stove) control knobs
 - ⑤ Oven control knob
 - ⑥ Light
- 🔥 Flame symbol on control knobs

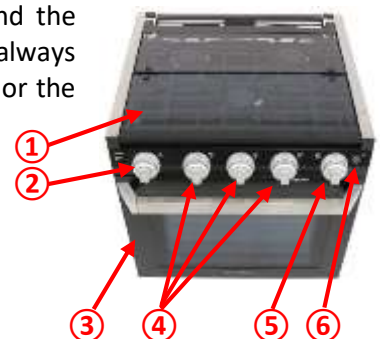


Top burner and oven can be ignited electronically or with a lighter/match. Please follow instructions below.

TOP BURNER/STOVE

Turn the appropriate burner knob ④ counter-clockwise to the flame symbol position. Immediately strike and place a burning long match or butane lighter through the spaces in the grate near the burner ports. Alternatively, you can turn the ignition knob/spark ② clockwise repeatedly until the burner lights. To extinguish the flame, turn the appropriate burner knob ④ clockwise to the OFF position.

OVEN

Open the oven door ③. Push and turn the oven control knob ⑤ counter-clockwise to the LITE position. Continue to push and hold the oven control knob and place a burning long match or butane lighter through the spaces in the grate near the ports of the burner to light the burner. Still push and hold the knob for at least 5 seconds after pilot is lit. Rotate the oven control knob to adjust the flame. Instead of match or lighter you can use the ignition knob/spark ②. While pushing and holding the oven control knob rotate the ignition knob/spark clockwise repeatedly until burner lights.

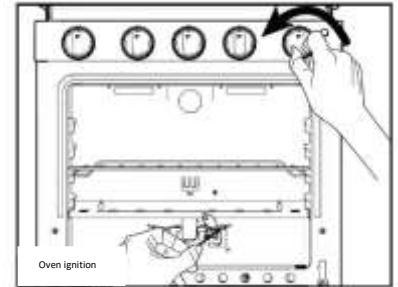

To extinguish the oven, push and turn the oven control knob ⑤ clockwise to the OFF position.

CAUTION:	Stove and oven must be turned off while you are driving and must NEVER be used to heat the living area. We recommend always opening a window or skylight when the stove and/or oven is in use. Make sure the oven door is properly closed because the plastic knobs above can melt easily.
-----------------	--

MICROWAVE

Our motorhomes are equipped with a microwave in addition to a stove and oven. Please note that the microwave only works if you are hooked up to a power grid.

CONTROLS AT A GLANCE



- ① Time Defrost
- ② Time Cook
- ③ Power
- ④ Number Keys
- ⑤ Stop/Cancel: Clears all previous settings pressed before cooking starts.
During cooking: press once to stop oven; twice to stop and clear all entries.
- ⑥ Weight Defrost
- ⑦ Clock
- ⑧ Kitchen Timer
- ⑨ Auto Menu
- ⑩ Start/+30SEC.
- ⑪ Memory

POWER LEVEL

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

CLOCK SETTING

1. Press "CLOCK" once, "00:00" will display
2. Press the number keys and enter the current time. Example "1, 2, 1, 0" for 12:10.
3. Press "CLOCK" to finish clock setting. ":" will flash and clock will be lighted

KITCHEN TIMER

1. Press "KITCHEN TIMER " once, the screen will display 00:00, the first hour figure flash.
2. Press the number keys and enter the timer time. (The maximum cooking time is 99 minutes and 99 seconds.)
3. Press " START/+30SEC. " to confirm setting.
4. When the timer time arrives, the buzzer will ring 5 times. If the clock has been set (12-hour system), the screen will display the current time.

Note: 1. The kitchen time is different from 12-hour system. Kitchen Timer is a timer.
2. During kitchen timer, any program cannot be set.

MICROWAVE COOK

1. Press "TIME COOK" once, the screen will display "00:00".
2. Press number keys to input the cooking time, the maximum cooking time is 99 minutes and 99 seconds.
3. Press "POWER" once, the screen will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.
4. Press " START/+30SEC. " to start cooking.

Example to cook the food with 50% microwave power for 15 minutes.

- a. Press "TIME COOK" once. "00:00" displays.
- b. Press "1", "5", "0", "0" in order.
- c. Press "POWER" once, then press "5" to select 50% microwave power.
- d. Press "START/+30SEC." to start cooking.

Note:

- 1) In the process of setting, if the " STOP/CANCEL" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.
- 2) If "PL 0" selected, oven will work with fan for no power. Use this level to remove the odour of the oven.
- 3) During microwave cooking, "POWER" can be pressed to change the power you need. After pressing "POWER", the current power flash for 3 seconds, now you can press number button to change the power. The oven will work with the selected power for the rest time.

SPEEDY COOKING

1. In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press "START/+30SEC." to increase the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
2. In waiting state, instant cooking at 100% power level with 30 seconds cooking time can be started by pressing "START/+30SEC". Each press on the same button will increase cooking time by 30 seconds; the maximum cooking time is 99 minutes and 99 seconds.

Note: During microwave cooking and time defrost, time can be added by pressing "STRT/+30SEC." button.

WEIGHT DEFROST FUNCTION

1. Press " WEIGHT DEFROST "once, the screen will display "dEF1".
2. Press numerical buttons to input weight to be defrosted. Input the weight ranged between 4~100 Oz.
3. Press " START/+30SEC. " to start defrosting and the cooking time remained will be displayed.

TIME DEFROST FUNCTION

1. Press " TIME DEFROST " once, the screen will display "dEF2".
2. Press number pads to input defrosting time. The effective time range is 0:01~99:99.
3. The default microwave power is power level 3. If you want to change the power level, press " POWER " once, and the screen will display "PL 3", then press the number pad of the power level you wanted.
4. Press " START/+30SEC. " to start defrosting. The remained cooking time will be displayed.

POPCORN

1. Press " POPCORN " repeatedly until the number you wish appears in the display, "1.75", "3.0", "3.5" will display in order. For example, press "POPCORN" once, "1.75" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer will sound five times and then turn back to waiting state.

POTATO

1. Press " POTATO " repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.
"1"SET: 1 potato (approximate 8 Oz) /
"2"SETS: 2 potatoes (approximate 16 Oz)
"3"SETS: 3 potatoes (approximate). For example, press "POTATO" once, "1" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

FROZEN VEGETABLE

1. Press " FROZEN VEGETABLE " repeatedly until the number you wish appears in the display, "4.0", "8.0", "16.0" Oz will display in order. For example, press "FROZEN VEGETABLE" once, "4.0" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

BEVERAGE

1. Press " BEVERAGE " repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 120ml for example, press "BEVERAGE" once, "1" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

DINNER PLATE

1. Press " DINNER PLATE " repeatedly until the number you wish appears in the display, "9.0", "12.0", "18.0" Oz will display in order. For example, press "DINNER PLATE" once, " 0" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

PIZZA

1. Press " PIZZA " repeatedly until the number you wish appears in the display, "4.0", "8.0", "14.0" Oz will display in order. For example, press "PIZZA" once, "4.0" appears.
2. Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

MEMORY FUNCTION

1. Press "0/MEMORY" to choose memory 1-3 procedure. The screen will display 1, 2, 3.
2. If the procedure has been set, press " START/ +30 SEC." to use it. If not, continue to set the procedure. Only one or two stages can be set.
3. After finishing the setting, press "START/ +30 SEC." once to save the procedure. If press " START/ +30 SEC." again, it will start cooking.

Example: To set the following procedure as the second memory, that is memory 2. To cook the food with 80% microwave power for 3 minutes and 20 seconds the steps are as follow:

- a. In waiting states, press "0/MEMORY" twice, stop pressing until the screen displays "2".
- b. Press "TIME COOK" once, then press "3", "2", "0" in order.
- c. Press "POWER" once, "PL10" displays, then press "8" and "PL8" displays.
- d. Press "START/ +30 SEC." to save the setting. Buzzer sounds once and the screen will display "2". If you press "START/+30SEC." again, the procedure will be saved as the memory 2 and operated.
- e. If electricity is not cut off, the procedure will be saved all the time. If it is, the procedure need to reset.
- f. If you want to run the saved procedure, in waiting state, press "0/MEMORY" twice, screen displays "2", then press "START/+30SEC." to run.

MULTI-STAGE COOKING

At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Auto cooking cannot work in the multi-stage cooking.

Example: If you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following:

1. Press "TIME COOK" once, then press "5", "0", "0" to set the cooking time;
2. Press "POWER" once, then press "8" to select 80% microwave power.
3. Press "TIME COOK" once, then press "1", "0", "0", "0" to set the cooking time;
4. Press "POWER" once, then press "6" to select 60% microwave power.

5. Press "START/ +30 SEC." to start cooking.

LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press " STOP/CANCEL " for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state; meanwhile, screen will display " ".

Lock quitting: In locked state, press " STOP/CANCEL " for 3 seconds, there will be a long "beep" denoting that lock is released.

INQUIRING FUNCTION

1. In cooking state, press " CLOCK ", the oven will display clock for three seconds.
2. In the microwave cooking state, press " POWER " to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done by the same way as above.

COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep"s to alert user the cooking is finished.

OTHER SPECIFICATIONS

1. In standby state, if the set clock digital tube displays current time, the icon " : " would flash; otherwise, it shows " 0:00 ".
2. In setting function state, the screen displays corresponding setting.
3. In working or pause state, the screen displays surplus cooking time.

FRIDGE


AUTOMATIC VS. PROPANE MODE

When you set your fridge to the **AUTOMATIC** mode it automatically selects the available energy source; this means, if you are hooked up to the campground's power grid, the fridge runs on **110V (AC)**. If no hook-up is available, it runs on **PROPANE (LP)**. We generally recommend setting the Automatic mode for your fridge. If the fridge is set to Propane (LP), it exclusively runs on propane and does not automatically switch to AC when you hook up to the 110V power grid.

CAUTION:	<ol style="list-style-type: none"> 1. Park the RV in a level spot. Incline positions can damage the fridge. 2. Always make sure to close the fridge and freezer doors properly. 3. Before you enter a gas station or a ferry please turn off the fridge first, then shut off the propane. After leaving gas station or ferry turn on propane first and fridge second.
-----------------	--

The control panel for your fridge is located between the freezer and the fridge.

- ① ON/OFF button
- ② INDICATOR light
- ③ MODE button
- ④ AUTO icon
- ⑤ AC plug icon
- ⑥ FLAME icon
- ⑦ TEMP SET button
- ⑧ SNOWFLAKE icons

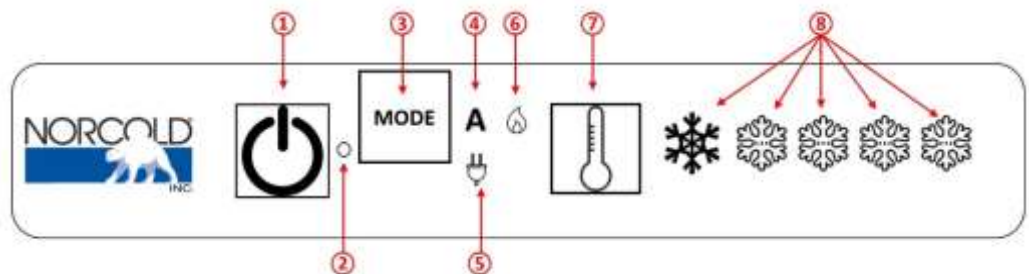

Automatic Mode Operation

- Touch and release the ON/OFF button ① to turn the refrigerator on. If the indicator light ② glows solid green, the refrigerator is operating correctly.
- Touch the TEMP SET button ⑦ as needed to set the temperature setting. One snowflake ⑧ lit up is the warmest, five the coldest setting.
- If the AUTO icon ④ and the AC PLUG icon ⑤ are lit up, 120V AC power is available to the refrigerator and it's operating on AC electric power.
- If the AUTO icon ④ and the FLAME icon ⑥ are lit up, 120V AC power is NOT available and the fridge is operating on propane gas.

Manual AC Mode Operation

- Touch and release the ON/OFF button ① to start the refrigerator.
- Touch the MODE button ③ until the AUTO icon ④ goes off and only the AC PLUG icon ⑤ remains lit.
- Touch the TEMP SET button ⑦ as needed to set the temperature setting. One snowflake ⑧ lit up is the warmest, five the coldest setting.

Manual LP Gas Mode Operation

- Touch and release the ON/OFF button ① to start the refrigerator.
- Touch the MODE button ③ until the AUTO icon ④ goes off and only the FLAME icon ⑥ (LP Gas) remains lit.
- Touch the TEMP SET button ⑦ as needed to set the temperature setting. One snowflake ⑧ lit up is the warmest, five the coldest setting.

To shut down the fridge, touch and hold the ON/OFF button ① for 2 seconds and release!

Troubleshooting: NORCOLD Fridge


Problem	Cause/Solution
POWER ON Indicator ② is on solid red	The fridge tried to operate on the selected energy source(s) with no success. Turn the fridge power OFF and then back ON to RESET. If operating in AUTO or Manual AC mode, check: <ul style="list-style-type: none"> - That the fridge is plugged into a serviceable outlet. - That the AC fuse or circuit breaker is intact. - That you plugged in into 110 V or the generator is working.
POWER ON Indicator ② is on solid red	If operating in the AUTO or GAS mode, check: <ul style="list-style-type: none"> - That the house battery is charged and working. - That the valve of the propane tank is open.
<p>POWER ON Indicator flashes every 5 sec.</p> <ul style="list-style-type: none"> - 1 time Problem to the AC Heater. - 2 times Fault in fridge electronic controls. - 4 times Fault in fridge electronic controls. - 5 times A flame is present at the burner, when there should not be one. - 8 times DC input voltage is too low. LP GAS mode has been inhibited. - 9 times DC input voltage is too low. All modes have been inhibited. - 10 times Loss of communication between the electronic controls. Fridge will continue operating in the last “known” operating mode and temperature setting. - 11 times DC input voltage is too high. All modes have been inhibited 	<p>This problem can't be solved by yourself. Please call our OnRoad-Service. We will make an appointment with a repair shop.</p> <p>Please check that the battery charging equipment of your RV is working.</p> <p>Turn the fridge OFF and then back ON to reset. If the fault continues, call our OnRoad-Service. We will make an appointment with a repair shop.</p> <p>Please check that the battery charging equipment of your RV is working.</p>

Problem	Cause/Solution
The temperature setting snow-flake(s) ⑧ flash off/ on at 1 second intervals anytime the user interface is “awake”	The thermistor has been sensed inoperable. The temperature is controlled via a backup operating system. Please call our OnRoad-Service at 1-866-535-6601. We will make an appointment with a repair shop.

SLIDE-OUT

Your motorhome is equipped with one slide-out. It is controlled via the integrated touch pad which is located on the wall left of the bathroom door. When using the slide-out, please proceed as follows:

1. Park on level surface, not in an inclined position and with sufficient clearance.
2. Stabilize the RV using the LEVELLING SYSTEM! Please see page 6 for details!
3. Place motorhomes transmission into the PARK (P) position.
4. Apply the parking brake.
5. Engine MUST be running!

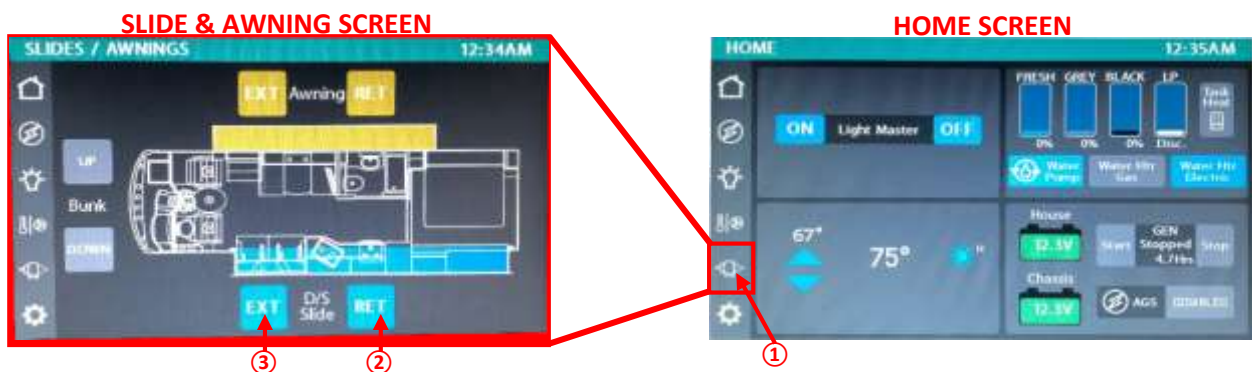

6. Tap the SLIDES/AWNING button ① on the HOME SCREEN button to reach the menu for the slide-out.
7. Press and hold the RETRACT button ② for 3 – 5 seconds. The slide-out will sync.
8. Press and hold EXTEND ③ until slide-out is fully extended and another 3 – 5 seconds to sync the slide-out.

To retract the slide-out:

1. Make sure that the transmission is still in the PARK (P) position, parking brake is engaged, unit is levelled and the engine is running.
2. Press and hold the RETRACT button ② until the slide-out is fully retracted and another 3 – 5 seconds to sync the slide-out.

CAUTION:	Please have no heavy items or people in the slide-out while operating. The motor of the slide-out may overheat and be damaged.
-----------------	--

Troubleshooting: Slide-Out

Problem	Cause/Solution
Slide-out does not move	<ul style="list-style-type: none"> - Main power switch is off - Coach battery power is too low - Gear shift is not in (P) park position - Circuit breaker (30 amp) in the fuse box is tripped - Objects under or on top that prevent the slide-out from moving <p>When you get no power to the slide-out you can try</p> <ul style="list-style-type: none"> - to press the battery boost button at the dash while operating the slide-out - perform a manual reset of the slide-out. Please see instructions below!
Slide-out moves uneven	Hold the switch for 2 seconds after full extension or retraction.

The slide-out module is located in the top of the slide-out module & storage compartment on the driver's side (see page 12, #10). Press the Mode button ① quickly six times in a row, and on the seventh time keep it pressed for 5 seconds. The red and green LEDs start flashing. Now release the Mode button. Wait for 2 minutes before you re-operate the slide-out.

If the reset does not have the desired result, first disconnect the white cable ③ (power connection) from the module and wait for 30 seconds before reconnecting it. Repeat this step with the red cable ② (ground) and the lower left plug. Now try to operate the slide-out. If this procedure does not help retract the slide-outs, the problem may be due to moisture in the slide-out module. Try eliminating the moisture using a hairdryer (only in dry weather!) and then repeat the above steps.



SAFETY EQUIPMENT

SMOKE DETECTOR/CARBON MONOXIDE ALARM



Each RV is equipped with a combined carbon monoxide alarm/smoke detector. This alarm sounds if an excess carbon monoxide concentration (CO) is measured in the air.

CO is a colourless and odourless gas, which can escape if, for example, there is a malfunction in the burner system. Sources of carbon monoxide include open flames (stove, oven, furnaces). Therefore, always make sure that the RV is well-ventilated while cooking appliances are in use, i.e. please open a skylight and/or window.

If the alarm device repeatedly emits individual beeps in certain intervals without triggering an alarm, this indicates that the batteries have reached the end of their life and need to be replaced. Please replace them to ensure that the smoke detector continues to function. Please keep all receipts for such expenses and present them upon return of the RV for reimbursement.

FIRE EXTINGUISHER

A fire extinguisher is part of the safety equipment in each of our motorhomes. Please refer to the "Vehicle Specifications" chapter for its location.

PROPANE DETECTOR/ALARM



Each RV is equipped with a propane detector, which is always located near the floor. The alarm goes off whenever an increased propane emission (e.g. from the stove or oven) is detected. Please do not place any objects near the propane detector to avoid false alarms.

Please note that the propane alarm is connected to the coach battery, and if the level of batteries is too low, the alarm emits a beep every 30 seconds. In that case, the coach battery must be recharged to ensure continued safety in the vehicle.

In the event of an alarm:

In the event of an alarm, please turn off the propane supply on the propane tank, open all windows and doors, and wait outside of the RV until the alarm stops. Once the alarm has stopped, please check if the control knobs on the stove and oven are off and no propane escapes unnoticed.

RETURNING THE VEHICLE

TIME

Please return the vehicle READY FOR INSPECTION to your rental station at the latest time stated in the rental agreement to ensure that it can be properly maintained and cleaned for our next customer. Allow sufficient time for packing. The next renter will appreciate it.

TANKS

When returning the vehicle, the black and grey water tanks must be EMPTY and the fuel tank must be FULL.

FINAL CLEANING

Please return the vehicle in good condition and with the interior reasonably clean. We take pride in the condition of our vehicles, investing a lot of time on their maintenance and cleaning.

NO SMOKING

Smoking is not allowed in our vehicles! Violators will be fined according to our "Terms & Conditions".

EXTRA CHARGES

If the vehicle is returned late without prior approval by our rental station, an hourly late fee is charged according to our "Terms & Conditions". We will charge fees for emptying the waste water tanks, refuelling the fuel tank and cleaning of the vehicle's interior according to our "Terms & Conditions".

CAUTION:	Renters are fully liable for any traffic violations committed during your rental. Please pay your ticket upon your return at the rental station. For any delays, a processing fee is charged in addition to the actual ticket amount. The fees are listed in our "Terms & Conditions". Thank you for your understanding.
-----------------	--

If you have any questions or concerns, please don't hesitate to contact us. Your rental team would like to thank you and wish you a pleasant time with our Recreation Vehicle.

Your FRASERWAY Team



Disclaimers:

Features, components and appliances depicted in this manual may differ from your rental motorhome depending on the model year. All features, components, appliances, materials, instructions, and guidance depicted and/or described in the manual and documentation are as accurate as possible at the time of creation and initially published but may not be accurate as a result of your rental motorhome having been assembled on a date after the manual or document was produced and initially published. Fraserway RV LP reserves the right to make changes, substitutions and improvements to its products without prior notification. This manual is for demonstrative purposes only. If you are still unsure on how to properly operate any appliance or feature addressed by the manual or documentation, please consult with your local Fraserway RV rental branch directly. This manual is (c) 2021 Fraserway RV LP, and all related marks, logos, and model names are owned by Adventurer Manufacturing LP and Fraserway RV LP, Inc. or its licensor(s). No portion of this manual may be copied, altered, published, displayed, broadcast, or otherwise used without the express permission of Fraserway RV LP, Inc. All rights reserved.